

安全上の要点

以下に示す項目は安全を確保するうえで必要なことですので必ず守ってください。 1)引火性・爆発性ガスの環境では使用しないでください。 2)水、油、化学薬品の飛沫のある場所、蒸気のあたる場所では使用しないでください。 3) 製品の分解、修理・改造をしないでください。 4) 定格範囲を超える電圧、電流を印加しないでください 5) 電源の極性など、誤配線をしないでください。 6)負荷の接続を正しく行ってください。 7) 負荷の両端を短絡させないでください 8)ケースが破損した状態で使用しないでください。 9)廃棄するときは、産業廃棄物として処理してください。

使用上の注意

- 1) 電力線、動力線と本製品の配線は別配線としてください。同一配線あるいは同一ダクトにすると誘導 を受け、誤動作や破損の原因となることがあります。 2)コードの延長は100m以下としてください。延長には0.3mm²以上のコードをご使用ください。 3) 電源投入後、200ms以上経過後に検出が可能となります。 負荷と本製品の電源が別の場合、必ず本製品の電源を先に投入してください。 コード引き出しタイプにて連結使用時の場合は、電源を同時に入れてください。
- 連結されたセンサ間での電源投入時間差が30ms以上の場合は、相互干渉防止機能が 正常に動作しない、またモバイルコンソールが使用できない場合があります。
- 4)保護カバーは必ず装着した状態で使用してください
- 5)コネクタ部の短絡保護について(コネクタタイプを使用される場合)
- 感電や短絡防止のため、使用しない連結用電源端子には保護用シール(コネクタ:E3X-CNシリー ズに付属)を貼ってください。



100

- 6) センサヘッドのコネクタを着脱するときや、アンプを着脱、増設するときは、必ず電源を切ってください。 7)電源遮断や静電気などのノイズにより書き込みエラーが発生(ERR/EEPが点滅表示)した場合、本
- 体の設定キーによる設定初期化処理を行ってください。
- 8)モバイルコンソールで操作する場合
- モバイルコンソール形E3X-MC11-SV2を使用してください。ただし、一部使用できない機能がありま す。形E3X-MC11は使用できません。
- 9)形E3X-DA-Nとは光通信できません。
- 10) 電源投入直後は使用環境に応じて受光量が安定するまで時間がかかる場合があります。
- 11) 電源遮断時に出力パルスが発生する場合がありますので、負荷あるいは負荷ラインの電源を先行し て遮断してください。
- 12)清掃にはシンナー、ベンジン、アセトン、灯油類は使用しないでください。
- 13)形E2Cのセンサヘッドは使用できません。接続した場合、破損の可能性があります。
- 14) ATC有効時、ワーク速度が遅い場合、ワークにしきい値が追従し、正しく検出ができない場合がありま す。しきい値比率を小さくするか、ATC機能を無効にしてください。

パッケージ内容の確認

·アンプユニット 1台 ・取扱説明書(本書) 1枚

タイプ		高機能ATC搭載タイプ		
接続方式	2	コード引き出しタイプ	コネクタタイプ*1	
形式	NPN	E3C-LDA11AT	E3C-LDA6AT	
11/120	PNP	E3C-LDA41AT	E3C-LDA8AT	
電源電圧		DC12~24V±10%	。 リップル10%以下	
消費電力	J	消費電力1080mW	/以下(24V時45mA)	
制御出ナ		オープンコレクタ(DC26.4V以下)	
●1単出7	,	負荷電流:50mA以下、残留電圧:1V以下		
タイマ機能	ци L	OFF/オフディレイ/オンディレイ/ワンショット		
タイマ時間		1ms~5s		
微分検出モ	_ بر	あり		
パワーチューニン	•グ機能	あり		
ATC(アクティブ・ ュホールド・コント 機能		あり(しきい値を約30	D秒毎に更新します)	
相互干涉防」	しまたまた	あり<光通信同期式>*2		
相互十涉的工	口假肥	10台		
入出力設定		出力設定(2CH出力/エリア出力/自己診断出力/ATCエラー出力)		

*ご検出機能しにSHSと設定している場合は通信機能が無効となり、相互干渉防止機能および、モバイルコンソールとの 通信機能は使用できません。

2.各部の名称とはたらき

(2)メインデジタル赤色表示)



0 0

- (5)SET/BUN切替スイッチ (6)チャンネル切替スイッラ ① 1CHの出力がONしたときに点灯します。
-) 受光量や機能の名称を表示します。
- 2CH側の出力がONしたときに点灯します。
- ④ 検出時の補助的な情報や機能の設定値を表示します。 モードの切替えを行います。
- ⑥ 表示や設定を行うチャンネルを選択します。
- ⑦ 表示の切替えや機能の設定操作を行います。

3. 操作の基礎知識

■モードの切替え

モードの切替えは「SET/RUN切替スイッチ」で行います。 目的にあったモードに切替えて操作してください。

- モード 内 SET 検出条件やティーチングによりしきい値を設定するときに選びます。 実際に検出を行うときや以下の設定を行うときに選びます。 RUN しきい値比率調整、ATC開始、しきい値マニュアル調整、ティーチング、パワーチューニング、ゼロリセ
- ット、キーロック

🔳 キー操作

表示の切替えや検出条件の設定操作は、操作キーで行います。

キーの役割は、現在選んでいるモードによって変わります。

5 0 1 1 #T	キーの	はたらき
キーの種類	RUNモード	SETモード
UP+-	しきい値、しきい値比率を上げます。	設定内容によってはたらきが変わります。 ・ティーチングを実行 ・設定値の変更(順方向)
DOWN+-	しきい値、しきい値比率を下げます。	設定内容によってはたらきが変わります。 ・ティーチングを実行 ・設定値の変更(逆方向)
MODE+-	「MODEキー設定」によってはたらきが 変わります。 ・ATC開始(工場出荷時) ・ティーチング ・パワーチューニング実行 ・ゼロリセット実行	設定したい機能の表示を切り替えます。

■ 表示の見方

メインデジタルとサブデジタルに表示される内容は、現在選んでいるモードによって異なり

9	<u>о</u> Т	-场山1	可俊、忉め(竜凉を入れるとRUNモ−	- トの内谷が衣小されます。
	÷	-ド	メインデジタル(赤色表示)	サブデジタル(緑色表示)
SET		ΕT	キー操作によって受光量*や機能名称を 順番に表示します。 * 「検出機能」に [DIFF] (微分動作)を設定 している場合でも受光量表示となります。	キー操作によってしきい値*やメインデジタルに 表示している機能の設定値を順番に表示します。 *「検出機能」に[DIFF](微分動作)を設定してい る場合は受光量変化に対するしまい値を表示します。
	R	ATC ON	現在の受光量を表示します。 (工場出荷時)	現在のしきい値としきい値比率を交互に表示 します。(工場出荷時)
	U N ※	ATC OFF	現在の受光量を表示します。「検出機 能」に[DIFF](微分動作)を設定して いる場合は受光変化量を表示します。	現在のしきい値を表示します。「検出機 能」に [DIFF] (微分動作)を設定して いる場合は受光量変化に対するしきい値 を表示します。

※表示内容は「表示切替」機能で変更することができます。「5.詳細設定」参照

4.基本設定

1. 動作モードを設定する

入光時にONするか遮光時にONするかを選びます。 SET

= 1	モートの 動作モー	- ト」(設定します。(5.詳細設定」参照
	選択肢	内容
	LON(ライトオン) (工場出荷時)	入光時に出力がONします。「検出機能」に [DIFF](微分動作)を設定してい る場合はエッジ検出時出力がONします。
	DON (ダークオン)	遮光時に出力がONします。「検出機能」に [DIFF](微分動作)を設定してい る場合はエッジ検出時出力がOFFします。

2. パワーを調整する(必要に応じて)

現在検出中の受光量を「パワーチューニング目標値(2000:工場出荷時設定)」近くに調整 したいときに行う操作です。パワーチューニングは必ず検出物体とヘッドを固定して、受光 量が安定している状態で実行してください。 ■設定方法

あらかじめ、 「MODEキー設定」機能の設定が [PTUN] (パワーチューニング) になっていることを確認してください。工場出荷時は、[ATC]が設定されていま す。「5.詳細設定」参照



PEUn PTUN パワーチューニング実行中) 🔷 一定時間で表示切替 / 1010101 2000/

メインデジタルの表示について‐

パワーチューニング目標値

調整が完了し、操作前の表示に戻ります。

「パワーチューニング目標値」は変更することができます。「5.詳細設定」参照

検出機能を切り替えると、受光量が変化することがありますので、その場合は 検出機能切り替え後に再度パワーチューニングを実行してください。

●パワーチューニングエラー ^{準地払バー表示後、}以下の内容が表示された場合は、エラーが発生しています。

進19/ V	我小孩、以下0万日か	1	:10/	こ物口は、エノ	"	光エ
		Т				

オーバーエラー 2回点滅 パワーチューニング目標値に対して現在の受光量が小さすぎたためのエ <u>PtUniouEr</u> ラー。パワーは調整されません。パワーを上げることができるのは、パ ワーチューニングを設定していない状態の受光量から約1.5倍までです。 PTUN OVER 2回点滅 ボトムエラ パワーチューニング目標値に対して現在の受光量が大きすぎたためのエ ラー。最小パワーで調整されます。パワーを下げることができるのは、 PtUn-botnf パワーチューニングを設定していない状態の受光量から約1/8までです。 PTUN BOTM ■解除方法 RUNモードに切替え

SET RUN MODEキーを押しながら、DOWNキーを3秒以上押す \square 注)MODEキーを押した後すぐにDOWNキーを押してください。 PEUn: サブデジタルが2回点滅し、パワーチューニングが解除されます。 PTUN OFF

3.しきい値を設定する

CHECK!

÷ې

ATC機能がON(有効)の場合

しきい値比率を調節し、ATC開始することにより、しきい値が現在の光量に約30秒毎に更新されます。 あらかじめ、「MODEキー設定」機能の設定が[ATC]になっていることを確認してください。工場出荷時 は、[ATC]が設定されています。「5.詳細設定」参照



ATC機能がOFF(無効)の場合

1)マニュアル設定



2)ティーチング設定

①ワークありなしティーチング -「ワークありとワークなしの2 点をそれぞれ検出し、その中間値の光量をしきい値として設定します。RUNモード、SETモ ードいずれのモードでも設定できます。 RUNモードにて設定する場合、あらかじめ、「MODEキー設定 | 機能の設定が「2PNT]になっていることを確認してく

ださい。工場出荷時は、[ATC]が設定されています。[5.詳細設定]参照





<u>ب</u> 「検出機能」に[DIFF] (微分動作)が選択されている場合、オートマティックティーチングは 無効となります。

③透過形(回帰反射形)ワークなしティーチング

②オートマティックティーチング(移動ワークにて設定)

③ 通道加い道が広なかが、 「ならかった」の場合反射形センサヘッド用の設定方法でワークがない状態にて行います。 (ワークなし状態)受光量の約ー6%の値をしきい値として設定します。微妙な光量差を安定して検出で きます。



④反射形ワークなしティーチング

反射形センサヘッド用の設定方法でワークがない(背景)状態にて行います。 (ワークなし状態)受光量の約+6%の値をしきい値として設定します。微妙な光量差を安定して検出で きます。



÷ې 「検出機能」に[DIFF](微分動作)を設定している場合、(ワークなし状態の) 受光量の上側で安定して検出できる最小の位置にしきい値が設定されます。

・ティーチングエラー

ティーチングを実行後、サブデジタル表示に下記が表示された場合はエラーが発生しています。ただし、しきい値は可能 な範囲にて設定されますが、正しく検出できない場合があります。

OVERエラー 受光量が大きすぎます。 次のどちらかを行った後、再度ティーチング実行ください。 ・受光量が小さくなるようにヘッドを設定 ・パワーチューニング実行
LOWエラー 受光量が小さすぎます。 次のどちらかを行った後、再度ティーチング実行ください。 ・受光量が大きくなるようにヘッドを設定 ・パワーチューニング実行
NEARエラー 受光量の変化が小さすぎます。 受光量の変化が大きくなるようにヘッドを設定後、再度ティーチング実行くだ さい。



9.出力段回路図







ご承諾事項

当社商品は、一般工業製品向けの汎用品として設計製造されています。従いまして、次に 掲げる用途での使用を意図しておらず、お客様が当社商品をこれらの用途に使用される際 には、当社は当社商品に対して一切保証をいたしません。ただし、次に掲げる用途であって も当社の意図した特別な商品用途の場合や特別の合意がある場合は除きます。

- (a)高い安全性が必要とされる用途(例:原子力制御設備、燃焼設備、航空・宇宙設備、鉄 道設備、昇降設備、娯楽設備、医用機器、安全装置、その他生命・身体に危険が及び うる用途)
- (b)高い信頼性が必要な用途(例:ガス・水道・電気等の供給システム、24時間連続運転 システム、決済システムほか権利・財産を取扱う用途など)
- (c) 厳しい条件または環境での用途(例:屋外に設置する設備、化学的汚染を被る設備、 電磁的妨害を被る設備、振動・衝撃を受ける設備など)
- (d) カタログ等に記載のない条件や環境での用途
- *(a)から(d)に記載されている他、本カタログ等記載の商品は自動車(二輪車含む。以下同 じ)向けではありません。自動車に搭載する用途には利用しないで下さい。自動車搭載 用商品については当社営業担当者にご相談ください。
- *上記は適合用途の条件の一部です。当社のベスト、総合カタログ、データシート等最新版 のカタログ、マニュアルに記載の保証・免責事項の内容をよく読んでご使用ください。





correctly impossible for it. Please make a threshold ratio small or not effective an ATC function

Confirming the Package Contents

Amplifier Unit: 1
 Instruction Sheet (this sheet): 1

1. Ratings and Specifications

Туре		Advanced, ATC function models		
Connection m	ethod	Prewired	Separate connector*1	
Model number	NPN	E3C-LDA11AT	E3C-LDA6AT	
woder number	PNP	E3C-LDA41AT	E3C-LDA8AT	
Supply volta	ge	12 to 24 VDC ±10%,	ripple (p-p) 10% max.	
Power consum	ption	1,080 mW max. (4	5 mA max. at 24 V)	
0		Open collector (2	26.4 V DC max.);	
Control outp	out	load current: 50 mA max.; residual voltage: 1 V max.		
Timer		OFF, OFF-delay, ON-delay, or one-shot		
Timer time	9	1 ms to 5 s		
Differential detection	on mode	Supported		
Power tunir	ng	Supported		
ATC(Active Threshold Control) function		Supported(Threshold updates a	t intervals of about 30 seconds)	
Mutual interference Prevention*2		Supported(optical communications sync method)		
		Possible for up to 10 Units		
I/O settings		Output setting (channel 2 output, a ATC Error output)	area output, self-diagnosis output,or	

the E3X-CN22 Slave Connector (2-conductor). Either Connector can be used. Communications are disabled if SHS is selected for the detection mode, and the communications functions for mutual interferencement on and the Mobile Console will not function. individually or as a master, obtain the E3X-CN21 Master Connector (4-conductor), and when using as a slave, obtai



- 1 Lit when the output for channel 1 is ON
- Displays the incident light level or the function name Lit when the output for channel 2 is ON
- Displays supplemental detection information, the setting of a function, etc.
- Used to switch the mode
- Used to select the channel to display or set.
- ⑦ Used to change the display, set functions, etc.

3. Basic Operating Information

Setting the Mode

- The mode is set using the SET/RUN switch. Set this switch according to the operation to be
 - Mode Description
 - Select to set detection conditions, to teach the threshold value, etc.
 - Select for actual detection operation or to set the following: Manual adjustment of threshold ratio, starting ATC thres holds, teaching power adjustment, zero reset, or key lock.

Key Operations

The operation keys are used to switch the displays and set detection conditions. The functions of the keys depend on the current mode.

Kov	Function			
Key	RUN mode	SET mode		
UP key	Increases the threshold or threshold ratio.	Depends on the setting. Executes teaching. Changes the setting forward. 		
DOWN key	Decreases the threshold or threshold ratio.	Depends on the setting. Executes teaching. Changes the setting in reverse. 		
MODE key	Depends on the MODE key setting. • Starting ATC(default setting). • Teaching • Executes power tuning. • Executes a zero reset.	Switches the function to be set on the display.		

Time to Press Keys

If a specific time for pressing a key is not given in a procedure, press the key for approximately 1 second. For example, if the procedure says ipress the UP key,î then press the UP key for approximately 1 second and then release it.

Reading Displays

The information displayed on the main display and sub-display depends on the current mode. For the default settings, the RUN mode displays will appear when the power supply is turned ON for the first time

Mode		Main display (red)	Sub-display (green)
SET		Displays the incident light level,* function name, or other information depending on the key operation. *The incident light level will be displayed even if DIFF (differential operation) is set for the detection method.	Displays threshold value* or the setting of the function displayed on the main display depending on the key operation. The threshold value for the change in the incident light level will be displayed if DIFF (differential operation) is set for the detection method. For the default setting, the current threshold value will be displayed.
(See note.)	ATC ON	For the default setting, the current incident light level will be displayed. (default setting)	For the default setting, the current threshold value will be displayed. (default setting)
	ATC OFF	The current incident light level will be displayed. The change in the incident light level will be displayed when DIFF (differential operation) is set for the detection mode.	The current threshold value will be displayed. The threshold value for the change in the incident light level will be displayed if DIFF (differential operation) is set for the detection method.

function. Refer to 5. Detailed Settings.

4. Basic Settings

1. Setting the Operation Mode

Select either light-ON or dark-ON operation.

Set as the operation mode in SET mode. Refer to 5. Detailed Settings

Selection Description LON (light-ON) The output will turn ON when the incident light level is above the threshold. (default) f DIFF (differential operation) is set for the detection method, the output will turn ON when an edge is detected. DON (dark-ON) The output will turn ON when the incident light level is below the threshold. If DIFF (differential operation) is set for the detection method, the output will turn OFF when an edge is detected.

2. Adjusting the Power (as Required)

Power tuning can be used to adjust the incident light level that is currently being received to the power tuning target value (default: 2.000). Before tuning ON the power, always secure the detection object and Head and be sure that the incident light level is stable

Setting Method

Confirm that the MODE key setting is PTUN (power tuning) in advance. ATC is the default setting. Refer to



୍ତ୍ର The power tuning target value can be changed. Refer to 5. Detailed Settings.

÷٣ If power is tuned when SHS is selected for the detection method, the power will be set to the minimum value

Power tuning Errors

n error has occurred if one of the following displays appears after the progress bar is displayed. Flashes twice Over Error The incident light level is too low for the power tuning target value PEUniouEr | The incident light level is too low for the power turning target function. The power can be increased up to approximately 5 times the incident light level without power tuning. OVER PTUN Flashes twice Bottom Error The incident light level is too high for the power tuning target value. PEUn boen in the incident light level is to high for the power tanking anget taken in the power taken in the power taken is the incident light level without power tuning. BOTM PTUN

Clearing Method

Clearing Method	
	Switch to RUN mode
SET RUN	
	Hold down the MODE key and press the DOWN key for at least 3 seconds. Note: Press the DOWN key right after pressing the MODE key.
· · · · · · · · · · · · · · · · · · ·	-1

PEUN: oFF1 The sub-display will flash twice and power tuning will be cleared. PTUN OFF

3. Setting Thresholds

Effective set for ATC function

The threshold ratio is adjusted and the threshold is updated by the incident level every about 30 seconds by ATC start

Confirm that the MODE key setting is ATC in advance. ATC is the default setting. Refer to 5. Detailed Settings.



Disable ATC function



2) Teaching

() Teaching With and Without a Workpiece Teaching can be performed twice, once with and once without a workpiece, and the value between the two measured values is set as the threshold. RUN mode and SET mode - each mode can be set up.



If DIFF (differential operation) is set for the detection method, the threshold value <u>َشْ</u> will be set to half of the difference between the two measured values.

②Automatic-teaching(It sets up at move work.)

While continuing pushing a key, the middle of the detected maximum and the minimum value can be set up as a threshold.



been set to DIFF (differential operation)

3 Teaching for Through-beam or Retroflective Sensor Heads

Teaching for a Through-beam or Retroflective Sensor Head is performed without a workpiece. A value about 6% less than the incident light level with no workpiece is set as the threshold value. This method is ideal to stably detect very small differences in light level.



will enable stable detection

(4) Teaching for Reflective Sensor Heads

Teaching for a Reflective Sensor Head is performed without a workpiece (i.e., for the background). A value about 6% greater than the incident light level is set as the threshold value. This method is ideal to stably detect very small differences in light level.



be set to the minimum value above the incident light level without a workpiece that will enable stable detection

Teaching Error

After performing teaching, when the following is displayed on sub digital display, the error has occurred However, the threshold might not be able to be detected correctly though is set within the possible range

flash twice.	Over error	Light level is too large. Do one of the following and then repeat the operation. • Adjust the Head to decrease the incident light level. • Execute power tuning.
flash twice	Lo error	Light level is too small. Do one of the following and then repeat the operation. • Adjust the Head to increase the incident light level. • Execute power tuning.
	Near error	The difference of incident light level is too small. Do one of the following and then repeat the operation. • Adjust the Head to increase the difference between the two incidentlight levels.

5. Detailed Settings

The following functions can be set in SET mode. The default settings are shown in the transition boxes

All settings except for the operation mode and timer settings are the same for both channels *: The values shown for thresholds, incident light levels, percentages, etc., are examples only. Actual





6. Convenient Functions

Zeroing the Main Display

The incident light level displayed on the main display can be zeroed. The threshold displayed in the sub-display is shifted by an amount corresponding to the amount the incident light level was changed.

Confirm that the MODE key setting is 0RST (zero reset) in advance. PTUN (power tuning) is the default setting. Refer to 5. Detailed Settings.

CHECK! Zero-reset is not possible if the detection function is set to

"DIFF" (differential operation). Setting Method Clearing Method Switch to RUN mode. Switch to RUN mode SET Hold down the MODE key and press the DOWN key for at least 3 seconds. Press the DOWN key right after pressing the MODE key. Press the MODE key for at least 3 seconds. The display of the incident light level will stop changing.

 0
 -1
 130

 i.e., the incident light level
 2
 130
 1000

 Light level Threshold will be displayed as 0. Light level Threshold cleared.

Key Lock

All key operations can be disabled to help prevent key operating errors. Only the operation keys are disabled. The switches and selectors will still function.



9. I/O Circuits

E3C-LDA11AT and E3C-LDA6AT

E3C-LDA41AT and E3C-DLA8AT





Suitability for Use

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

	MRON Corporation Industrial Automation Company Kyoto, JAPAN Contact: www.ia.omron.com
	Regional Headquarters OMRON EUROPE B.V. Wegalaan 67-69, 2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388
	OMRON ELECTRONICS LLC 2895 Greenspoint Parkway, Suite 200 Hoffman Estates, IL 60169 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787
	OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711
	OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200
D	(t) Jun, 2019