

E5CC-B
Digital Controller

EN INSTRUCTION MANUAL

Thank you for purchasing the OMRON E5CC Digital Controller. This manual describes the functions, performance, and application methods needed for optimum use of the product. Please observe the following items when using the product.
• This product is designed for use by qualified personnel with a knowledge of electrical systems.
• Before using the product, thoroughly read and understand this manual to ensure correct use.
• Keep this manual in a safe location so that it is available for reference whenever required.

OMRON Corporation
©All Rights Reserved

Refer to the E5CC Digital Controllers User's Manual (Cat. No. H174) for detailed application procedures.

CC-B21 3686270-4B (Side-A)

Safety Precautions

Key to Warning Symbols

CAUTION Indicates a potentially hazardous situation which, if not avoided, is likely to result in minor or moderate injury or property damage. Read this manual carefully before using the product.

Warning Symbols

CAUTION Minor injury due to electric shock may occasionally occur. Do not touch the terminals while power is being supplied.

Electric shock, fire, or malfunction may occasionally occur. Do not allow metal objects, conductors, cuttings from installation work, moisture, or other foreign matter to enter the Digital Controller, the Setup Tool ports, or between the pins on the connectors on the Setup Tool cable. Attach the cover to the front-panel Setup Tool port whenever you are not using it to prevent foreign objects from entering the port.

Minor injury from explosion may occasionally occur. Do not use the product where subject to flammable or explosive gas.

Fire may occasionally occur. Do not allow dirt or other foreign objects to enter a Setup Tool port, or between the pins on the connectors on the Setup Tool cable.

Minor electric shock, fire, or malfunction may occasionally occur. Never disassemble, modify, or repair the product or touch any of the internal parts.

CAUTION - Risk of Fire and Electric Shock
(a) This product is UL listed as Open Type Process Control Equipment. It must be mounted in an enclosure that does not allow fire to escape externally.
(b) More than one disconnect switch may be required to de-energize the equipment before servicing.
(c) Signal inputs are SELV, limited energy.
(d) Caution: To reduce the risk of fire or electric shock, do not interconnect the outputs of different Class 2 circuits.
(e) E5CC-U, E5GC products: Use wires with heat resistance of 65°C min to wire the terminals because the maximum terminal temperature is 65°C. Other models of products: Use wires with heat resistance of 75°C min to wire the terminals because the maximum terminal temperature is 75°C.

If the output relays are used past their life expectancy, contact fusing or burning may occasionally occur. Always consider the application conditions and use the output relays within their rated load and electrical life expectancy. The life expectancy of output relays varies considerably with the output load and switching conditions.

If you replace only the Main Unit of the E5CC or E5DC-B, check the condition of the Terminal Unit. If corroded terminals are used, contact failure in the terminals may cause the temperature inside the Digital Controller to increase, possibly resulting in fire. If the terminals are corroded, replace the Terminal Unit as well.

Loose screws may occasionally result in fire. Tighten the terminal screws to the specified torque of 0.43 to 0.58 N·m.*1

Set the parameters of the product so that they are suitable for the system being controlled. If they are not suitable, unexpected operation may occasionally result in property damage or accidents.

A malfunction in the Digital Controller may occasionally make control operations impossible or prevent alarm outputs, resulting in property damage. To maintain safety in the event of malfunction of the Digital Controller, take appropriate safety measures, such as installing a monitoring device on a separate line.

*1 The specified torque is 0.5 N·m for the E5CC-U.

Suitability for Use

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product.

At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS/ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Precautions for Safe Use

Be sure to observe the following precautions to prevent operation failure, malfunction, or adverse effects on the performance and functions of the product. Not doing so may occasionally result in unexpected events. Use the product within specifications.

- (1) The product is designed for indoor use only. Do not use the product outdoors. Do not use or store the product in any of the following locations.
• Places directly subject to heat radiated from heating equipment.
• Places subject to splashing liquid or oil atmosphere.
• Places subject to direct sunlight.
• Places subject to dust or corrosive gas (in particular, sulfide gas and ammonia gas).
• Places subject to intense temperature change, or other application or use.
• Places subject to icing and condensation.
• Places subject to vibration and large shocks.
(2) Use and store the product within the rated ambient temperature and humidity range. When multiple Digital Controllers are mounted in close contact or stacked vertically, heat generated by the controllers can cause the internal temperature of each unit to rise, which may shorten their service life. In such cases, provide forced cooling, for example by directing airflow from a fan toward the controllers.
(3) To allow heat to escape, the product must be installed in a manner that does not block the ventilation holes on the product.
(4) Be sure to wire properly with correct polarity of terminals.
(5) To connect bare wires, use copper stranded or solid wires. Use the wire sizes and stripping lengths given in the following table to prevent smoking and firing of the wiring material.

Recommended Wires table with columns: Model, Recommended wires, Stripping length. Includes rows for E5CC, E5EC, E5AC, E5DC, E5GC (models with screw terminal blocks), E5GC (models with screwless clamp terminal blocks), E5CC-U (plug-in models), and E5CC-B (models with Push-In Plus terminal blocks).

*1 Use Ferrules with UL certification (R/C). Connect only one wire to each terminal. Use the specified size of crimped terminals to wire the E5CC, E5EC, E5AC, E5DC, and E5GC (models with screw terminal blocks) as well as the E5CC-U (plug-in models).

Crimp Terminal Sizes table with columns: Model, Crimp terminal size. Includes rows for E5CC, E5EC, E5AC, E5DC, or E5GC (models with screw terminal blocks) and E5CC-U (plug-in models).


- E5CC-B (models with Push-In Plus terminal blocks) Do not insert multiple wires into a single terminal (insertion) hole.
• E5CC (models with screw terminals) Do not connect two wires to a single terminal. You can connect up to two wires of the same size and type to a single terminal. You can also connect up to two crimp terminals.
• E5GC (models with screwless clamp terminal blocks) When connecting two wires to a single terminal, be sure to use ferrules (twin ferrules). *1
Select ferrules that meet the following specifications:
- Outer diameter: 0.8 to 1.4 mm
- Length of exposed conductive part: 8 to 12 mm
- Must be a double crimp (twist) type
*1 The E5GC (models with screwless clamp terminal blocks) has been UL tested with a single stranded wire connected.
(6) Do not wire the terminals that are not used.
(7) To prevent inductive noise, keep the wiring of the Digital Controller separate from high-voltage or high-current power lines. Do not run the controller wiring parallel to or in the same conduit as power lines. Effective measures include using separate conduits or ducts and using shielded cables. Install surge absorbers or noise filters on nearby equipment that generates noise, especially devices with inductive components such as motors, transformers, solenoids, and magnetic coils. When using a noise filter on the power supply, check the voltage and current ratings, and install the filter as close to the Digital Controller as possible. Also, keep the controller as far as possible from equipment that generates strong high-frequency signals (such as high-frequency welders or sewing machines) or equipment that produces surges.
Use this product within the rated load and power supply.
Make sure that the rated voltage is attained within two seconds of turning ON the power using a switch or relay contact. If the voltage is applied gradually, the power may not be reset or output malfunctions may occur.
(10) Make sure that the Digital Controller has 30 minutes or more to warm up after turning ON the power before starting actual control operations to ensure the correct temperature display.
(11) When executing self-tuning, turn on the power for both the load and the Digital Controller simultaneously, or turn on the load power before the controller power. If you turn on the controller power first and then the load power, proper self-tuning and optimal control cannot be performed.
(12) A switch or circuit breaker should be provided close to this unit. The switch or circuit breaker should be within easy reach of the operator, and must be marked as a disconnecting device for this unit.
(13) Wipe off any dirt from the Digital Controller with a soft dry cloth. Never use thinners, benzine, alcohol, or any cleaners that contain these or other organic solvents.
(14) Deformation or discoloration may occur.
(15) Design the system (control panel, etc.) considering a 2-second delay before the controller's output is set after power ON.
(16) The output will turn OFF when you move to the Initial Setting Level. Take this into consideration when performing control.
(17) The number of non-volatile memory write operations is limited. Therefore, use RAM write mode when frequently overwriting data during communications or other operations.
(18) Always touch a grounded piece of metal before touching the Digital Controller to discharge static electricity from your body.
(19) Use suitable tools when taking the Digital Controller apart for disposal. Sharp parts inside the Digital Controller may cause injury.
(20) For compliance with Lloyd's standards, the E5CC, E5CC-U, E5CC-B, E5EC, E5EC-B, E5AC, and E5DC must be installed under the conditions that are specified in Shipping Standards.
(21) On models with two Setup Tool ports (E5EC, E5EC-B, E5AC, E5DC, E5DC-B, and E5GC), do not connect cables to both ports at the same time. The Digital Controller may be damaged or may malfunction.
(22) Do not exceed the communications distance that is given in the specifications and use the specified communications cable.
(23) Do not turn the power supply to the Digital Controller ON or OFF while the USB-Serial Conversion Cable is connected. The Digital Controller may malfunction.
(24) Do not bend the communications cables past their natural bending radius. Do not pull on the communications cables.
(25) For the E5CC-U, when you attach the Main Unit to the Terminal Unit, make sure that the hooks on the Main Unit are securely inserted into the Terminal Unit.
(26) For the E5CC-U, when you attach the Main Unit to the socket, make sure that the hooks on the socket are securely inserted into the Main Unit.
(27) Install the DIN Track vertically to the ground.
(28) For the E5CC-B, always turn OFF the power supply before connecting the Main Unit to or disconnecting the Main Unit from the Terminal Unit, and never touch or apply shock to the terminals or electronic components. When connecting or disconnecting the Main Unit, do not allow the electronic components to touch the case.
(29) Observe the following precautions when you remove the terminal block or pull out (draw out) the interior of the E5CC.
• Turn OFF the power supply before you start and never touch or apply shock to the terminals or electronic components. When you insert the interior body of the Digital Controller, do not allow the electronic components to touch the case.
• Check for any corrosion on the terminals.
• When you insert the interior body into the rear case, confirm that the hooks on the top and bottom are securely engaged with the case.
(30) Observe the following precautions when wiring the E5CC-B.
• Do not wire anything to the release holes.
• Do not tilt or twist a flat-blade screwdriver while it is inserted into a release hole on the terminal block. The terminal block may be damaged.
• Insert a flat-blade screwdriver into the release holes at an angle. The terminal block may be damaged if you insert the screwdriver straight in.
• Do not allow the flat-blade screwdriver to fall out while it is inserted into a release hole.
• Do not do a wire twist past its natural bending radius or pull on it with excessive force. Doing so may cause the wire to break.
• Do not perform crossover wiring except for the input power supply and on the communications cables. (E5CC-B/E5EC-B only)
• Do not perform crossover wiring. (E5DC-B only)
(31) Use a commercial power supply for the power supply voltage input to a Digital Temperature Controller with AC input specifications. Do not use the output from an inverter as the power supply. Depending on the output characteristics of the inverter, temperature increases in the Digital Temperature Controller may cause smoke or fire damage even if the inverter has a specified output frequency of 50/60 Hz.
Do not use the product if the front sheet is peeled off. The front sheet is a structural part of the product and is different from the protective film. The protective film is intended to prevent scratches during transportation. Remove the protective film before using the product.

Specifications

Specifications table with columns: Power supply voltage, Operating voltage range, Power consumption, All other specifications, Indication accuracy, Event input, Control output 1, Control method, Transfer output, Ambient temperature, Ambient humidity, Storage temperature, Altitude, Recommended fuse, Weight, Degree of protection, Installation environment, Memory protection, Temporary overvoltage. Includes detailed technical specifications for each category.


Wiring

Dimensions

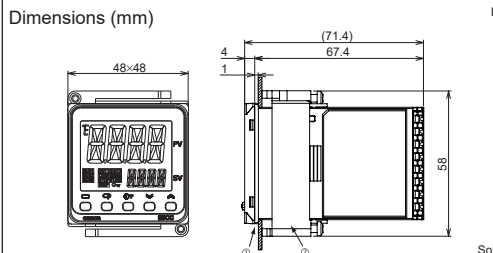

- * Do not remove the terminal block. Doing so may result in failure or malfunction.
* A Setup Tool port is provided on the upper of the product. Use this port to connect a personal computer to the product when using the Setup Tool. E5CC-F1Q2 USB-Serial Conversion Cable is required to connect the personal computer to the product. (Do not use the product with the USB-Serial Conversion Cable left permanently connected.)
Refer to the instruction manual provided with the USB-Serial Conversion Cable for details on connection methods.

Names of Parts on Front Panel

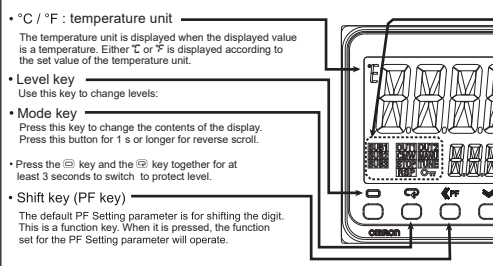

Operation Menu

Input Type

Input Type table with columns: Input type, Input, Setting, Setting range. Includes rows for Platinum resistance thermometer, Thermocouple, Infrared, Thermosensor, and E5B.

*The default is "5".
*E5BP will be displayed when a platinum resistance thermometer is mistakenly connected while input type is not set for it. To clear the E5BP display, correct the wiring and cycle the power supply.

Alarms (Alarms are output from auxiliary outputs.)

Alarms table with columns: Setting, Alarm type, Alarm output function. Includes rows for Deviation upper/lower limit, Deviation upper limit, Deviation lower limit, Deviation upper/lower range, Deviation upper limit standby sequence ON, Deviation lower limit standby sequence ON, Absolute value upper limit, Absolute value lower limit, Absolute value upper limit standby sequence ON, Absolute value lower limit standby sequence ON, LBA (only for alarm 1), PV Change Rate Alarm, SP absolute value upper limit, SP absolute value lower limit, MV absolute value upper limit, MV absolute value lower limit.

*1: Upper and lower limits can be set for parameters 1, 4 and 5 to provide for different types of alarm. These are indicated by the letter "L" and "H".
* The default alarm type is "2".

Conformance to EN/IEC Standards

This is a class A product. In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce interference.

A 급 기기 (업무용 방송통신기자재) 이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바랍니다. 가정용기기에서 사용하는 것을 목적으로 합니다.

Conformance to Safety Standard

Reinforced insulation is provided between input power supply, relay outputs, and between other terminals.

Due to UL Listing requirements, use the E54-CTL1 or E54-CTL3 current transformer with the factory wiring (internal wiring). Use a UL category X0BA or X0BA7 current transformer that is UL Listed for field wiring (external wiring) and not the factory wiring (internal wiring).


Always externally connect the recommended fuse that is specified in the instruction Manual before you use the Digital Controller.

Analogue Input
If you input an analog voltage or current, set the input type parameter to the correct input type. Do not use the Digital Controller to measure a circuit with Measurement Category II, III, or IV. Do not use the Digital Controller to measure an energized circuit with a voltage that exceeds 30 Vrms or 60 VDC is applied.

The protection provided by the Digital Controller may be impaired if the Digital Controller is used in a manner that is not specified by the manufacturer.


Installation

Individual mounting (mm)

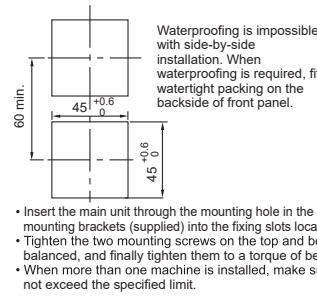


* Insert the main unit through the mounting hole in the panel (1 to 5 mm thickness). Insert the mounting brackets (supplied) into the fixing slots located on the top and bottom of the rear case. Tighten the two mounting screws on the top and bottom of the panel to keep them balanced, and finally tighten them to a torque of 0.29 and 0.39 N·m. When more than one machine is installed, make sure that the ambient temperature does not exceed the specified limit.


Side-by-side mounting (mm)



Connections (The applicability of the electric terminals varies with the type of machine.)

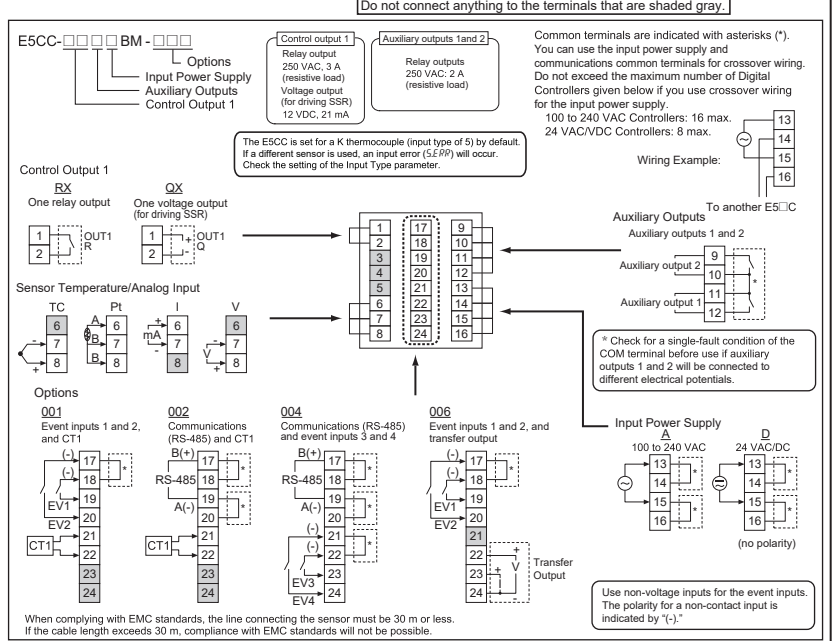


Initial Setting Level

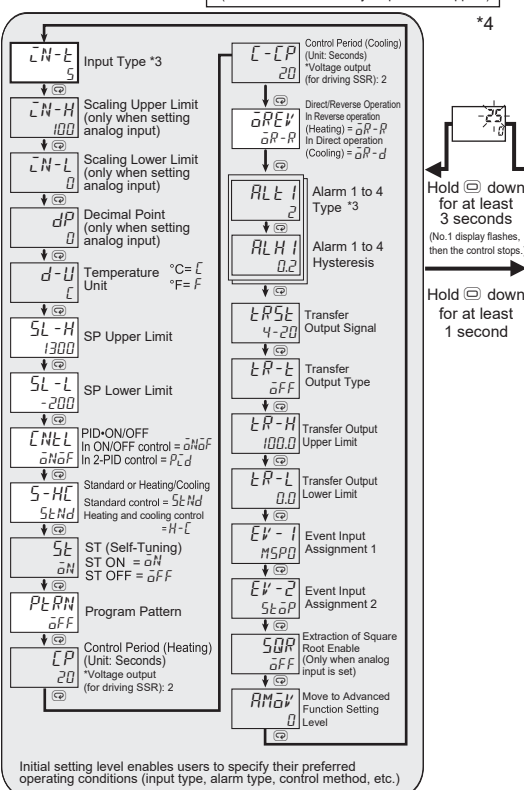


- *3: Refer to the adjoining tables for details of input types and alarm types.
*4: Operation is stopped when moved to the initial setting level. (Both control and auxiliary outputs are stopped.)
*5: The grayed-out setting items are not displayed for some models and some settings of other setting items. The parameters are not displayed under the following conditions.
- AT Execute/Cancel: Not displayed if PID ON/OFF is set to ON/OFF.
- SP Ramp Set Value: Not displayed if ST is set to ON.
- Alarm 1 Type: The default settings of the models that equipped with HBHS alarms. Can be displayed for a Controller with heater burnout and SSR failure detection if alarm 1 (default setting) is set for the Auxiliary Output 1 Assignment (Advanced Function Setting Level). Refer to the E5-CC Digital Controllers User's Manual (Cat. No. H174) for the setting method.
*6: The four numeric digits of the product code are displayed in the No. 2 display. The setting cannot be changed and there is nothing that you need to set.

Precautions for Correct Use


- 1. Connecting Wires to Push-In Plus Terminal Block
• Part Names of the Terminal Block
• Connecting Stranded Wires
Use the following procedure to connect the wires to the terminal block.
1. Hold a flat-blade screwdriver at an angle and insert it into the release hole. The angle should be between 10° and 15°. If the flat-blade screwdriver is inserted correctly, you will feel the spring in the release hole.
2. With the screwdriver still inserted into the release hole, insert the wire into the terminal hole until it strikes the terminal block.
3. Remove the flat-blade screwdriver from the release hole.
• Connecting Wires with Ferrules and Solid Wires
Insert the solid wire or ferrule straight into the terminal block until the end strikes the terminal block.

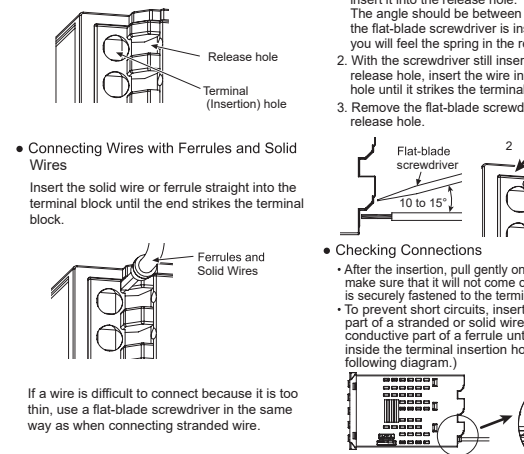

- 2. Removing Wires from Push-In Plus Terminal Block
Use the following procedure to remove wires from the terminal block.
1. Hold a flat-blade screwdriver at an angle and insert it into the release hole. The angle should be between 10° and 15°. With the screwdriver still inserted into the release hole, remove the wire from the terminal insertion hole.
2. Remove the flat-blade screwdriver from the release hole.

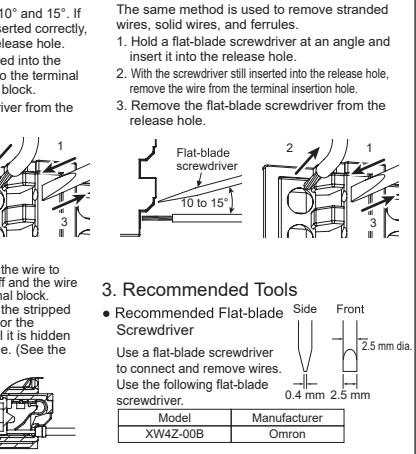

Adjustment Level

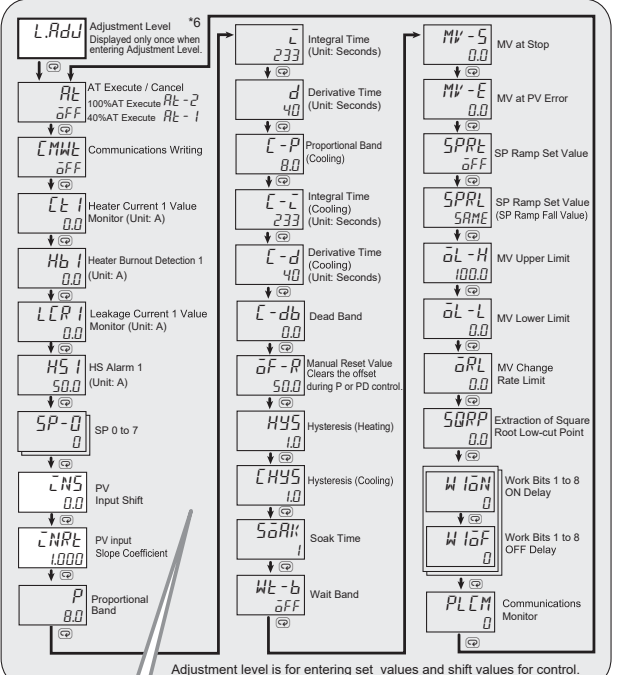

Only the value set to the LHS: Temperature Input Shift parameter is applied to the entire temperature input range. When the process value is 200°C, the process value is treated as 201.2°C after input shift if the input shift value is set to 1.2°C. The process value is treated as 198.8°C after input shift if the input shift value is set to -1.2°C.

Other functions

Refer to the E5-CC Digital Controllers User's Manual (Cat. No. H174) for information on the Advanced Function Setting Level, Manual Control Level, and other functions. Refer to the E5-CC Digital Controllers Communications Manual (Cat. No. H175) for information on communications.

Error Display (troubles shooting)

When an error has occurred, the No.1 display shows the error code. Take necessary measure according to the error code, referring the table below.

Error Display table with columns: No.1 display, Meaning, Action, Status at error. Includes rows for S.ERR (S. Err), E333 (E333), and E111 (E111).

If the input value exceeds the display limit (-1999 to 9999), though it is within the control range, [E333] will be displayed under -1999 and [E333] above 9999. Under these conditions, control outputs and alarms will operate normally. Refer to the E5-CC Digital Controllers User's Manual (Cat. No. H174) for the controllable ranges.

*2: Error shown only for "Process value / Set point". Not shown for other status.

OMRON EUROPE B.V. (Importer in EU)
Wegalaan 67-69, NL-2132 JD Hoofddorp The Netherlands
Phone 31-2356-81-300
FAX 31-2356-81-388
OMRON ELECTRONICS LLC
2895 Greensport Parkway, Suite 200 Hoffman Estates, IL 60169 U.S.A.
Phone 1-847-843-7900
FAX 1-847-843-7787
OMRON ASIA PACIFIC PTE. LTD.
No. 438A Alexandra Road # 05-05/08 (Lobby 2),
Alexandra Technopark, Singapore 119967
Phone 65-6835-3011
FAX 65-6835-2711
OMRON Corporation (Manufacturer)
Shiohji Honikawa, Shimogyo-ku, Kyoto 600-8530 JAPAN

